

The Selected areas are the locations where you will use the following steps on each side of cross rails:

Materials:



x 2 Bottom Cross Rail



x 2 Upper Cross Rail



x 8 Barrel Nut



x 8 Bolt




x 2 Upright



Allen Wrench

Step 1

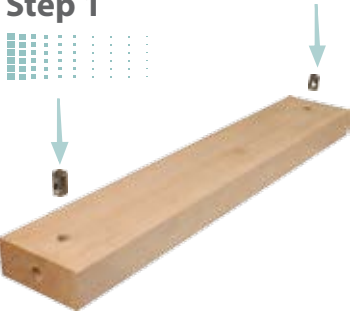

Place Barrel Nuts through both holes on the Cross Rails.




Make sure the Barrel Nuts has the hole facing the correct direction as show above:

Step 2



Position the Cross Rail with the plain surface facing outward.

Step 3

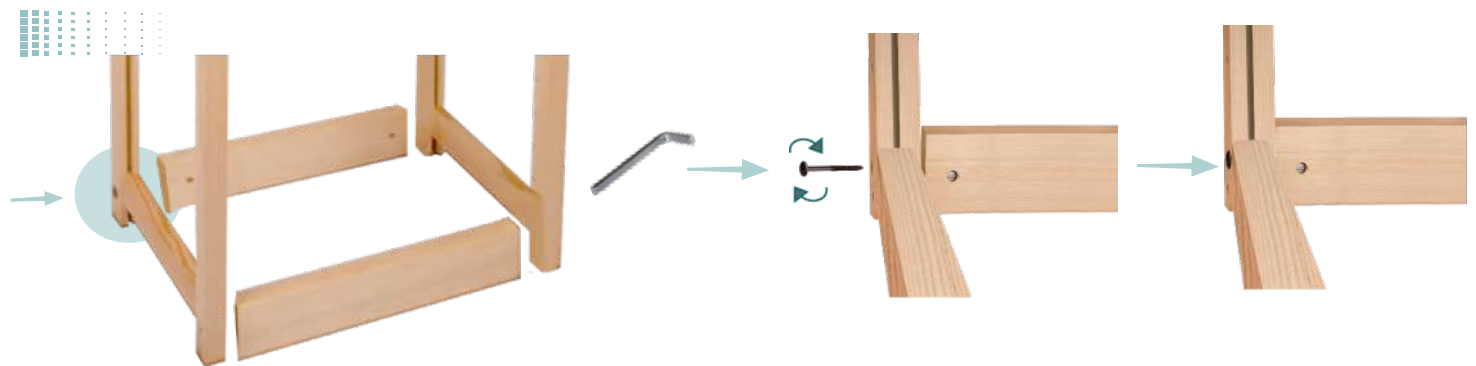

Screw in a bolt with the Allen Wrench tightly so it locks firmly with the Cross Rail on the other side.

Repeat Steps 1 through 3 to all of the corresponding locations.