

Bench Top Installation

For installing a bench top into a frame assembly.




- Hardware Included:**
4 - 1" Rubber Coated Pins
4 - 2 1/2" Bolts
4 - Washers
4 - Nuts
4 - Lock Nuts


Tool You will Need:
Phillips
Screwdriver




***NOTE:**
In the rare event that the holes do not line up properly, we recommend drilling through the hole using the upright as a guide for a 3/16" drill bit.

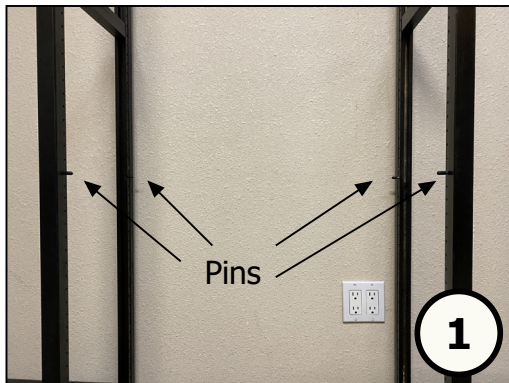

Set the 4 rubber coated pins at 16" off the floor in each upright. They will fit tight.

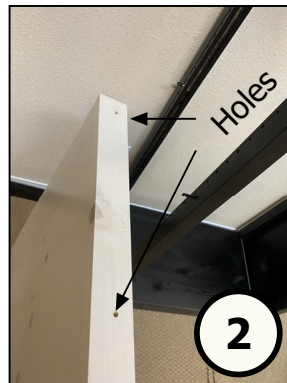

Set bench top onto pins with holes lined up with the uprights.

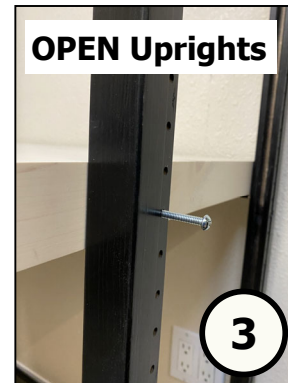

With OPEN uprights, you will insert four 2 1/2" bolts from the opposite sides of the uprights.



Secure all 4 bolts with washers and nuts. Secure the lock nuts on the ends of each bolt to prevent any nut from becoming loose over time.



Your installation is complete!