


# "L" Bracket Installation


For installations where base molding on the wall creates a gap and our standard Wall Bracket won't work.

Components Include:

- 1 - 2" long L Bracket (2 1/2" is also available)
- 2 - 2" long Drywall Screws  
(For anchoring into wall studs)
- 2 - Plastic Anchor & Screw Sets  
(If you cannot find a wall stud)
- 2 - 3/4" Wood Screws  
(You will only need one to screw into wood shelf)

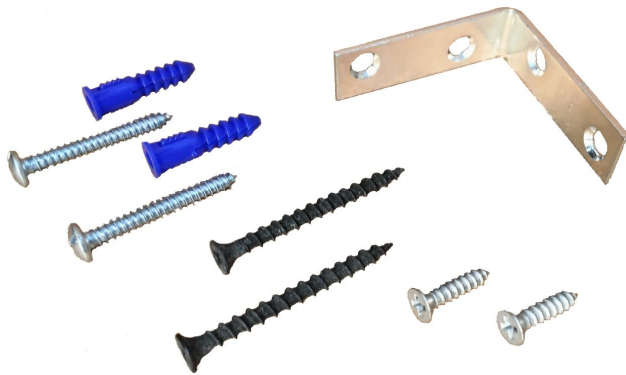


Use "L" Brackets when Molding creates a gap between upright & wall!

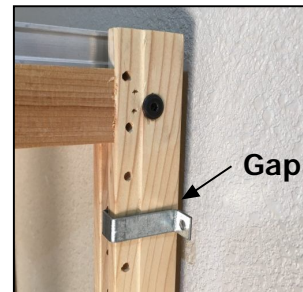


Std. Wall Bracket won't work.



Standard Wall Bracket will work.

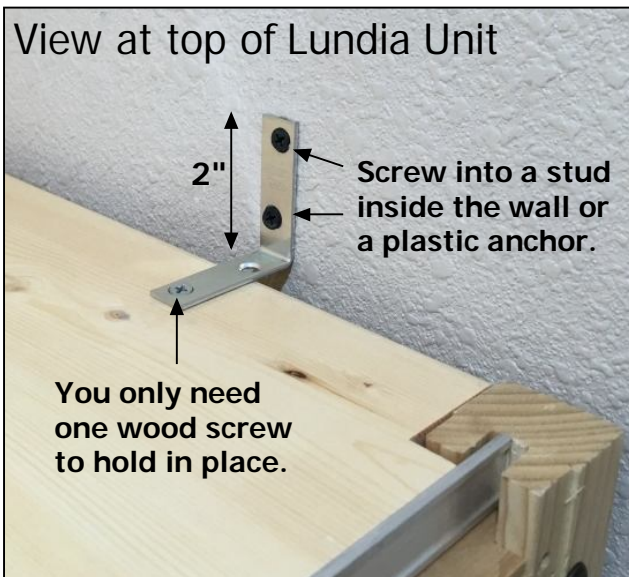

Attach "L" bracket to top shelf and wall as shown.

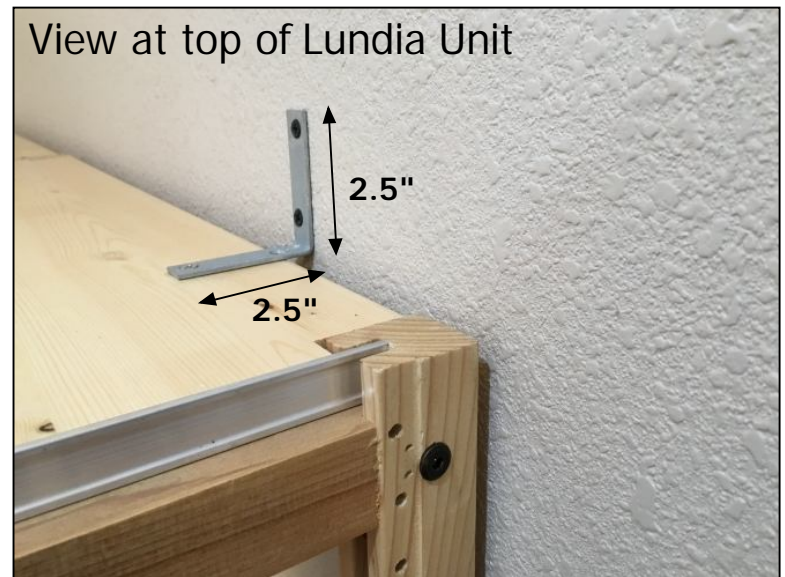

Larger 2.5 inch "L" Bracket set is available for wider gaps.

Questions? Call us Toll Free in US: (888) 989-1370 Monday - Friday, 8:30 - 5:00 Pacific Standard Time