

End Frame Bracket Connectors

For installations where there is not enough room to use our standard Allen Head bolt.

Components Include:

- 4 - 2" long L Bracket
- 8 - 3/4" long self tapping screws
(Use these with plastic washers)
- 8 - Plastic Washers
- 8 - 1/2" long self tapping screws




There is NOT enough room to fit our standard Allen Head bolt into the frame.



Attach "L" bracket to cross rail using 1/2" screws (NO washers here)



Attach "L" bracket to frame using 3/4" screws and plastic washers between bracket and wood.

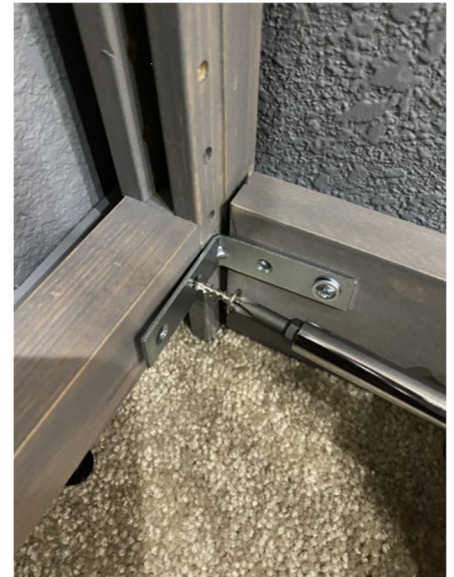

Repeat this step on all four corners.

Questions? Call us Toll Free in US: (888) 989-1370 Monday - Friday, 8:30 - 5:00 Pacific Standard Time